INSTALLATION INSTRUCTION FOR FIXTURE #4933

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (FIG. 1)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture including the mounting hardware.
2. Carefully remove the old fixture from the carton and check that all parts are included as shown in the illustration.
3. Thread the fixture loop (A) tightly onto the nipple (B).
4. Adjust the fixture arms to the proper position.
5. Place the glass shade (E) over the socket (F), then secure with the cushion ring (D) and socket ring (C).
6. Install the light bulb in accordance with fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**

MOUNTING THE FIXTURE (FIG. 2)

1. Thread the nipple (S) into the collar loop (T) until snug.
2. Thread the other end of nipple (S) into cross bar (P) until snug. The side of the cross bar marked with "GND" must face out.
3. Place lock washer (Q) over the end of nipple (S) protruding through cross bar (P) and thread hex nut (R) onto nipple (S) until tight.
4. Take this crossbar assembly and mount to ceiling outlet box (V) tightly using outlet box screws (W).
5. Use proper chain pliers to open one end link of the chain and connect to the fixture loop (A). Close the link.
6. By measuring, determine correct number of links needed for proper hanging height. Using a pair of chain pliers, disconnect and discard the remaining chain.
7. Lace the fixture wires through the chain (X).
8. Slip collar ring (Y) over the chain (X), then do the same with canopy (U).
9. Open the other end link of the chain (X) and connect to the collar loop (T). Close the link.
10. Feed the fixture wires through the collar loop (T) and nipple (S) and pull until tight.

CONNECTING THE WIRES (WIRING DIAGRAM)

11. At this point, connect the electrical wire as shown in the wiring illustration, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixtures ground wire to it. Otherwise, connect the fixture ground wire directly to the crossbar using the Green Screw provided.
12. Tuck these wires connectors neatly into the ceiling out let box and raise the collar ring (Y) and thread onto collar loop (T) protruding through canopy.

Your installation is now complete. Return power to the junction box and test the fixture.

Fig. 1

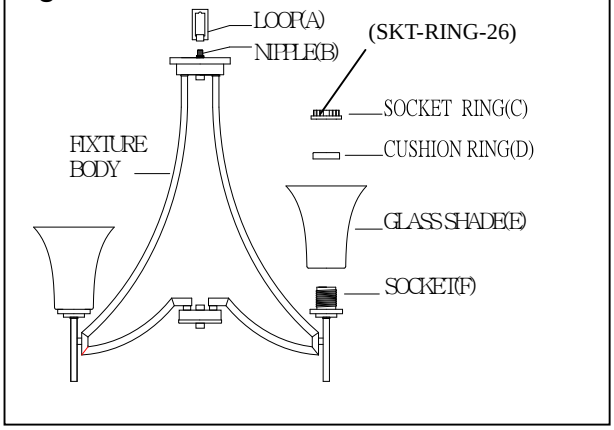

Fig. 2

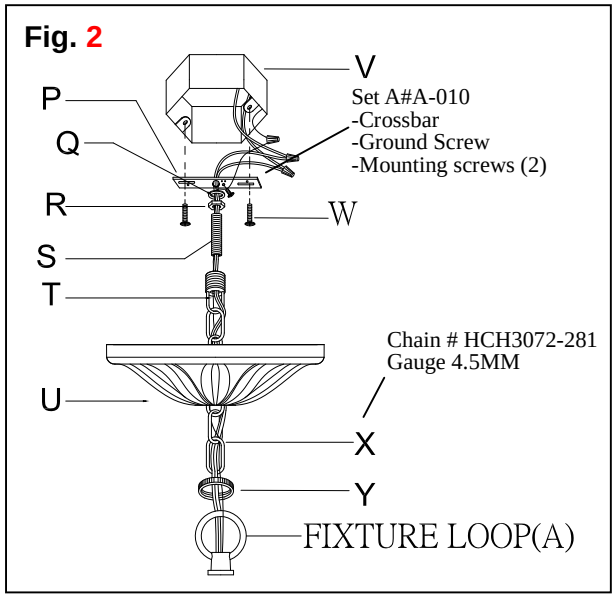

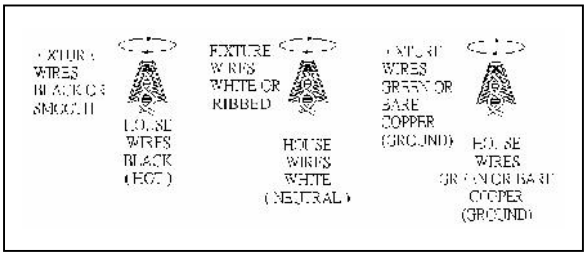
FIXTURE WIRES WHITE OR RIBBED
HOUSE WIRES WHITE (NEUTRAL)
FIXTURE WIRES GREEN OR BARE COPPER (GROUND)
HOUSE WIRES COPPER (GROUND)

Intertek

american lighting association

Notice: It is important to use proper chain pliers (not included) to OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.